


SHARC SETUP INSTRUCTIONS






<https://www.mriiot.com/s/SHARC-Setup-Instructions.pdf> rev.06/29/23

start here


Read the datasheet. <https://www.mriiot.com/s/SHARC-Data-Sheet-Latest.pdf>

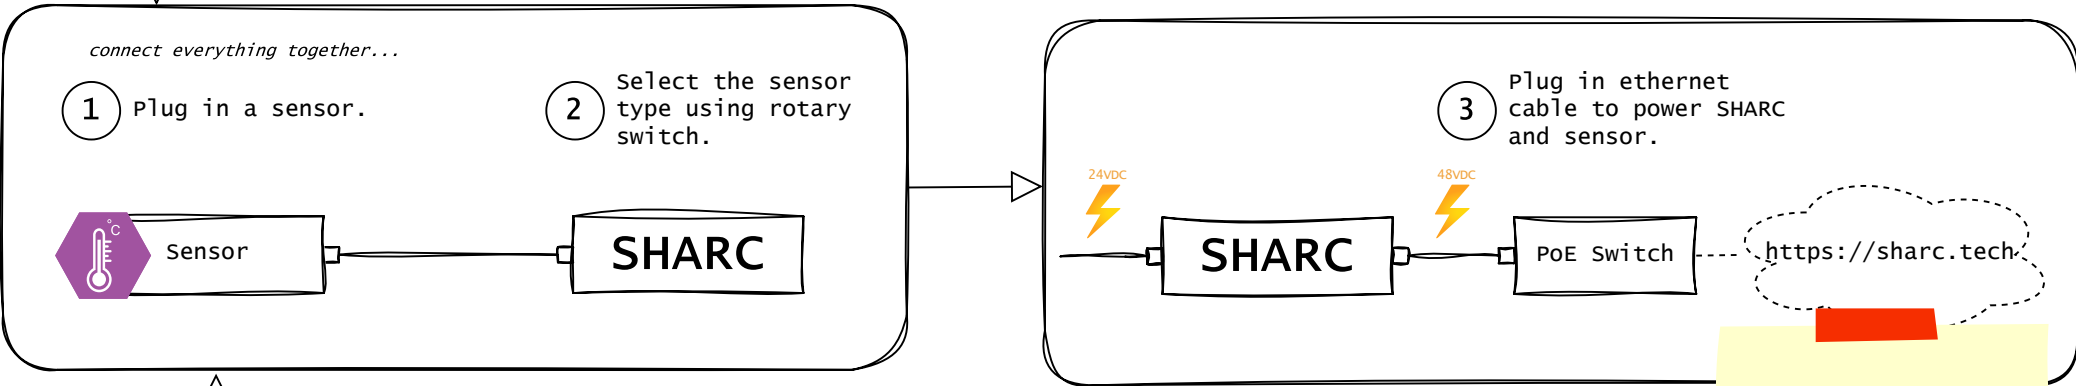

By default, the Sharc will connect to Internet hosted broker at sharc.tech.

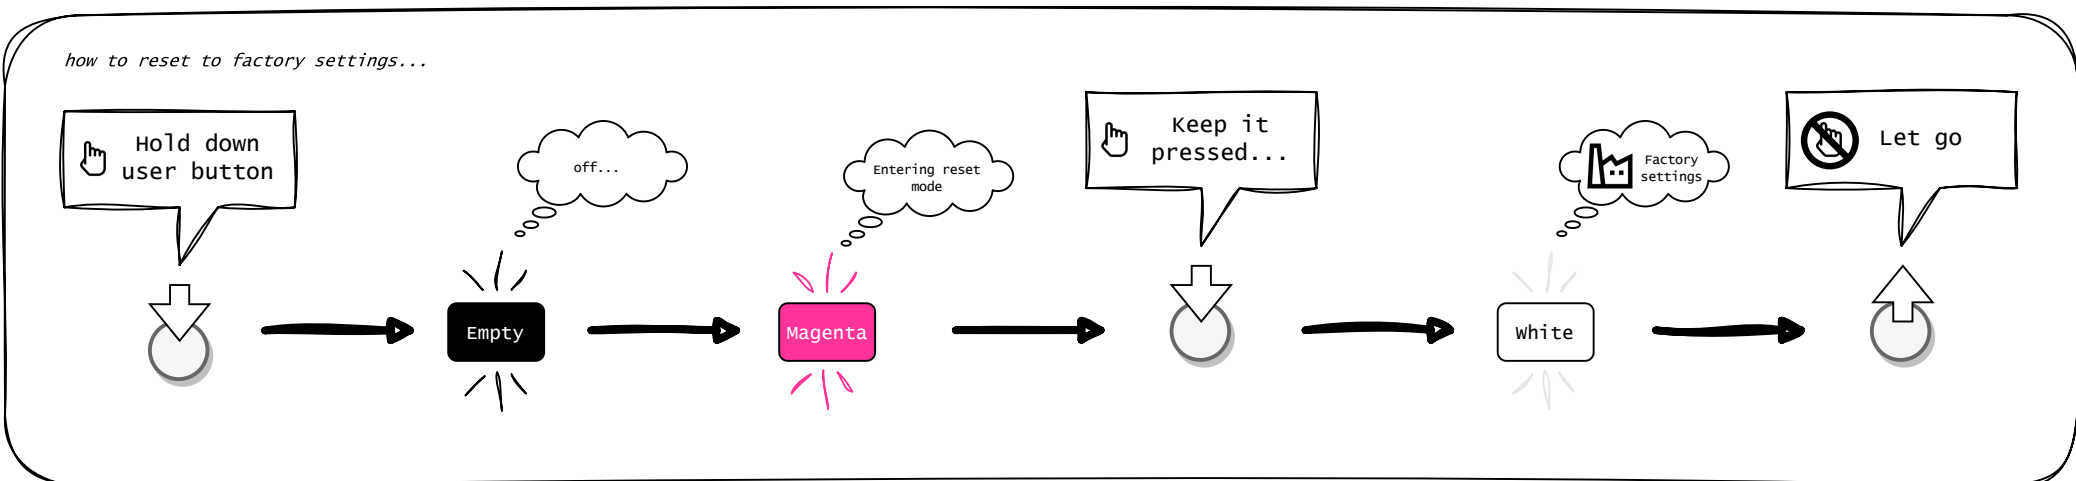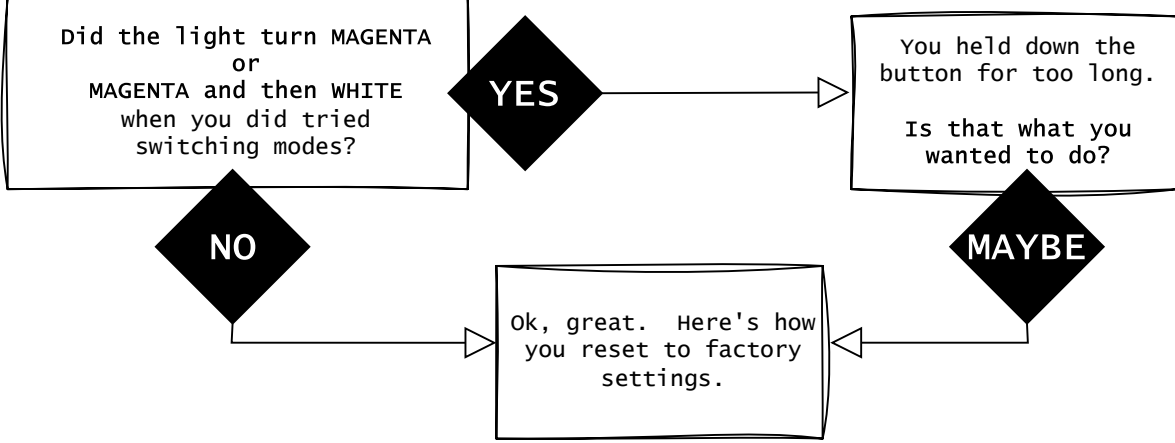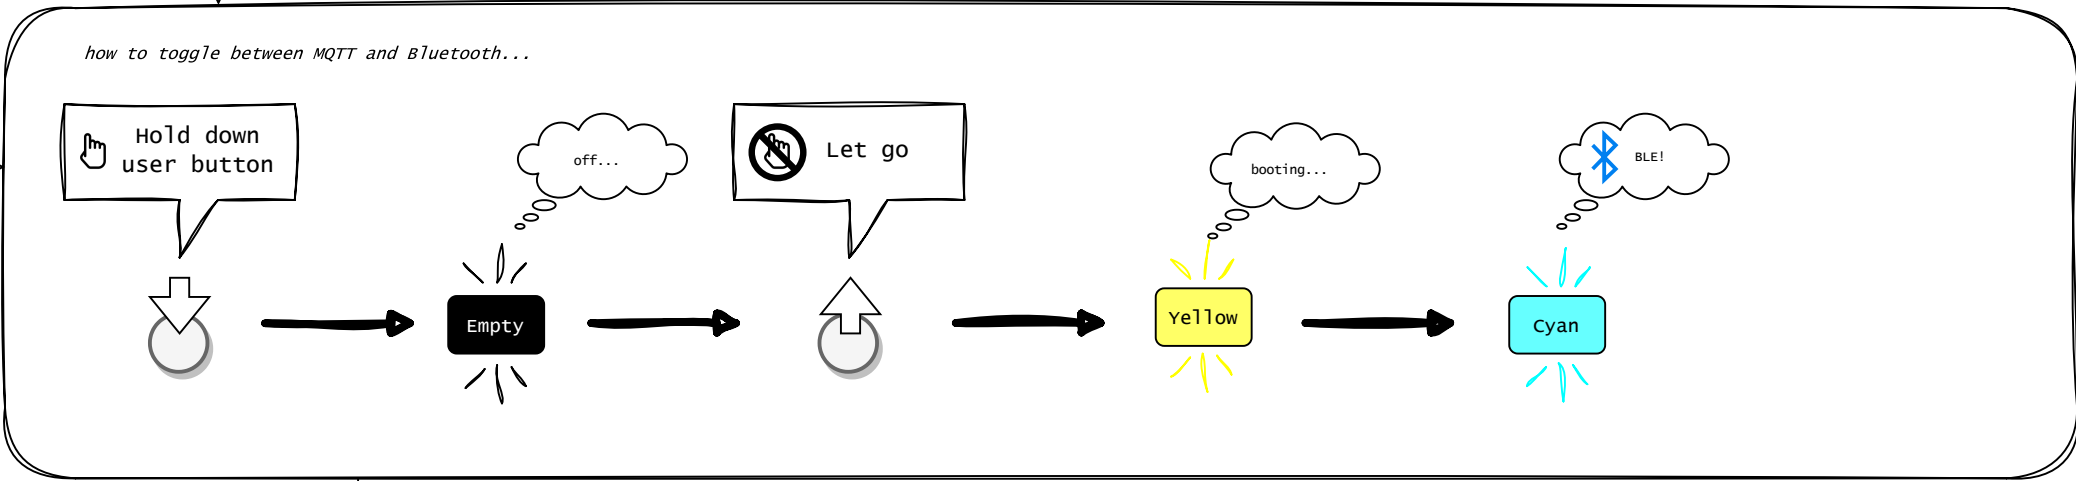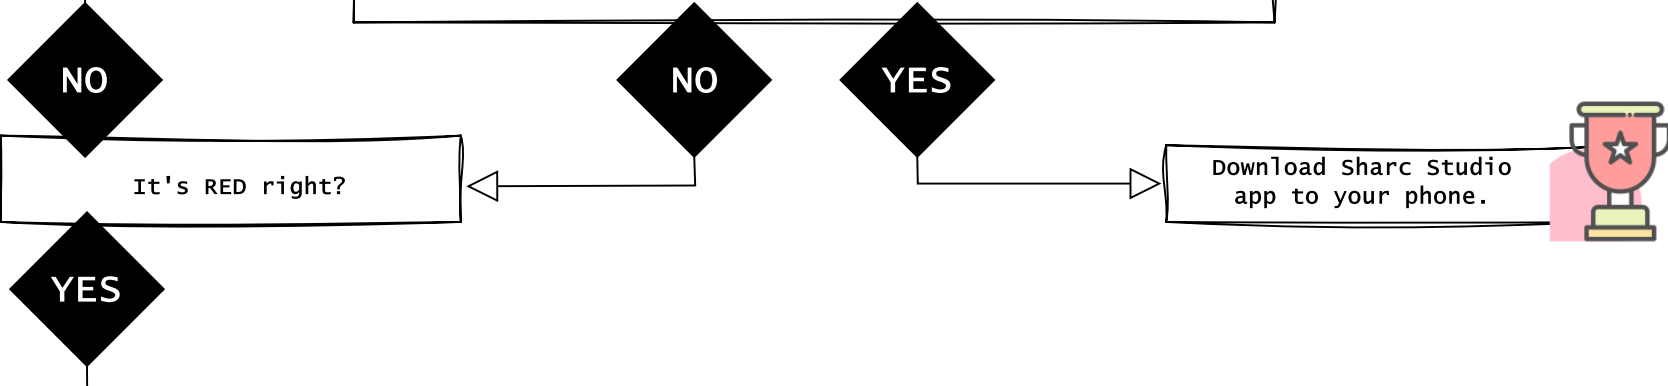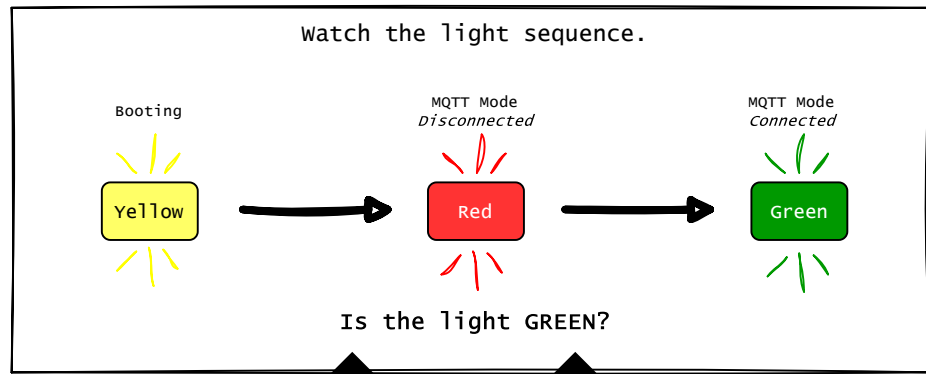

Ready to connect to Sharc?

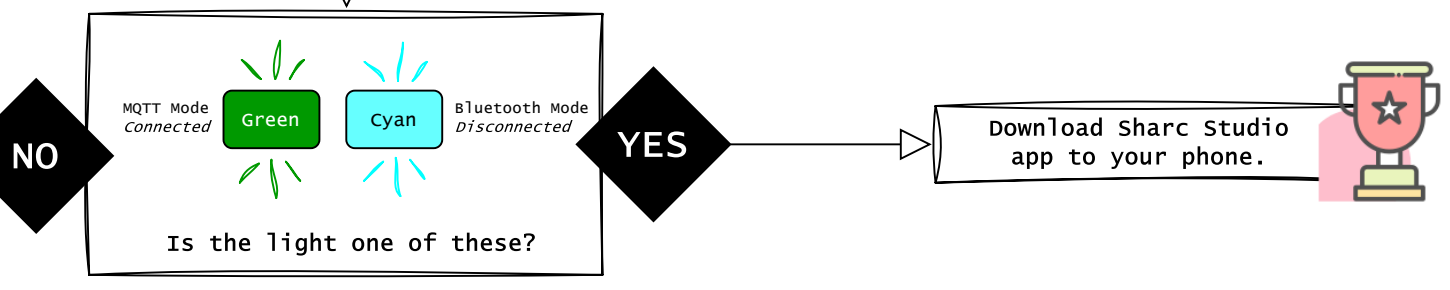

If you reconfigure the Sharc to connect to your own broker, you must enable web sockets on your broker for the app to communicate with your broker.